



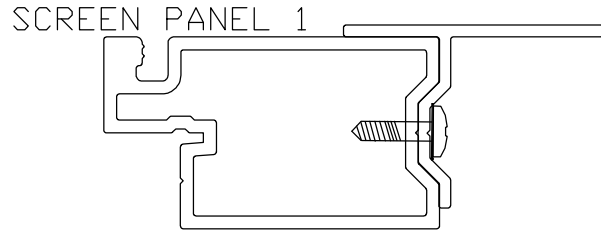
FACE CHANNELS FOR LEFT AND RIGHT PANELS  
TOWARDS THE EXTERIOR OF OPENING.  
INSTALL SCREWS EVERY 24" OC  
USE #27 DRILL FOR PRE-DRILLING

FACE BOTH CHANNELS FOR THE CENTER PANEL  
TOWARDS THE INTERIOR OF OPENING.  
INSTALL SCREWS EVERY 24" OC  
USE #27 DRILL FOR PRE-DRILLING

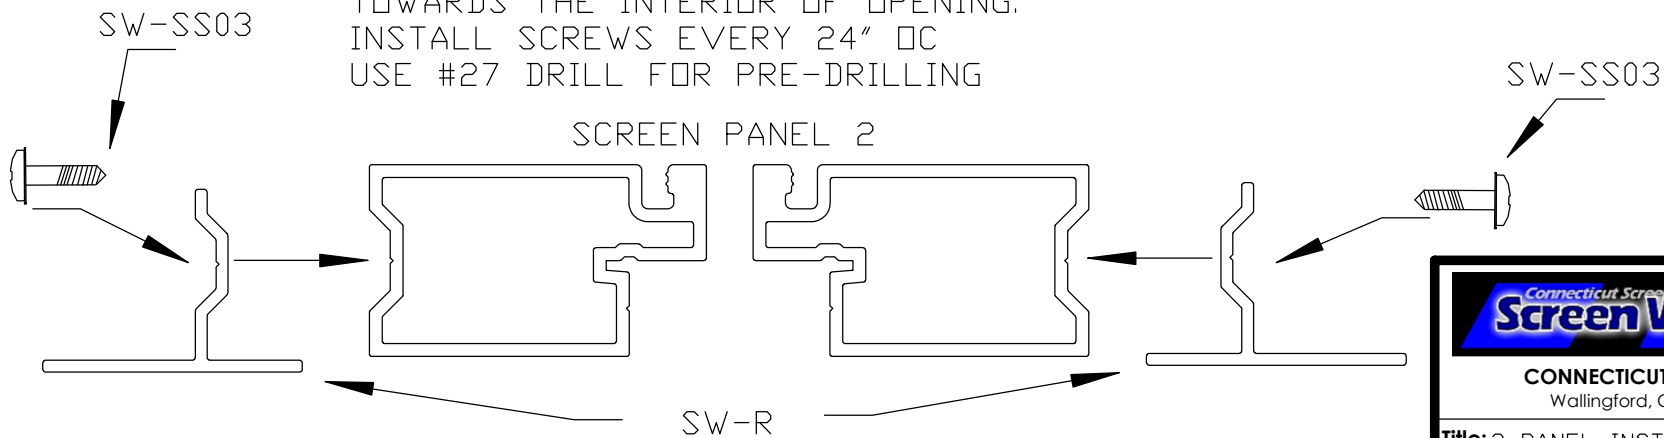


NOTICE:  
REVIEW AND UNDERSTAND ALL ASSOCIATED PAGES PRIOR TO CALCULATING ANY  
MANUFACTURE SIZES. R CHANNEL USE WILL AFFECT ALL PRODUCTION SIZES  
REQUIRED. ALSO REVIEW ALL STANDARD GUIDELINES FOR IMPORTANT  
INFORMATION, RESTRICTIONS, LIMITATIONS, AND RECOMMENDATIONS CONCERNING  
THIS EXTRUSION AND ITS USE. THIS PARTICULAR USAGE SUGGESTION MAY NEED TO  
BE MODIFIED FOR YOUR APPLICATION. IN ALL CASES, BE SURE TO CONSULT AND  
FOLLOW ALL LOCAL BUILDING CODES.

	
<b>CONNECTICUT SCREEN WORKS, INC</b> Wallingford, CT 06492 (203) 741-0859	
<b>Title:</b> 3 PANEL INSTALL (VERT R CHANNEL)	
<b>Date:</b> 08/01/06	<b>By:</b> MC
<b>Scale:</b> N/A	<b>Rev:</b> 08/01/07 by MC
<b>Page:</b> 1 OF 3	<b>Rev:</b> 10/26/08 by MC
<b>Alloy:</b> 6063	<b>Rev:</b>
<b>Temper:</b> T5	<b>Patent:</b> 7,938,163
<b>Length:</b> 16'	Others Pending
<b>Die:</b>	
<small>all contents copyright 2006, 2012 by CSW, Inc.</small>	




←  
LEFT SIDE OF PANEL 1

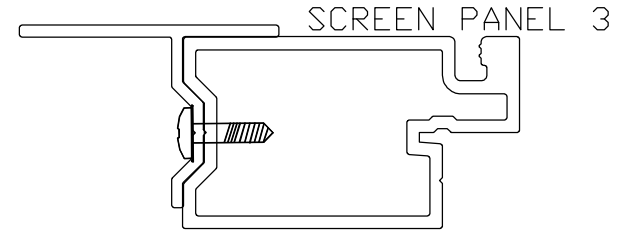


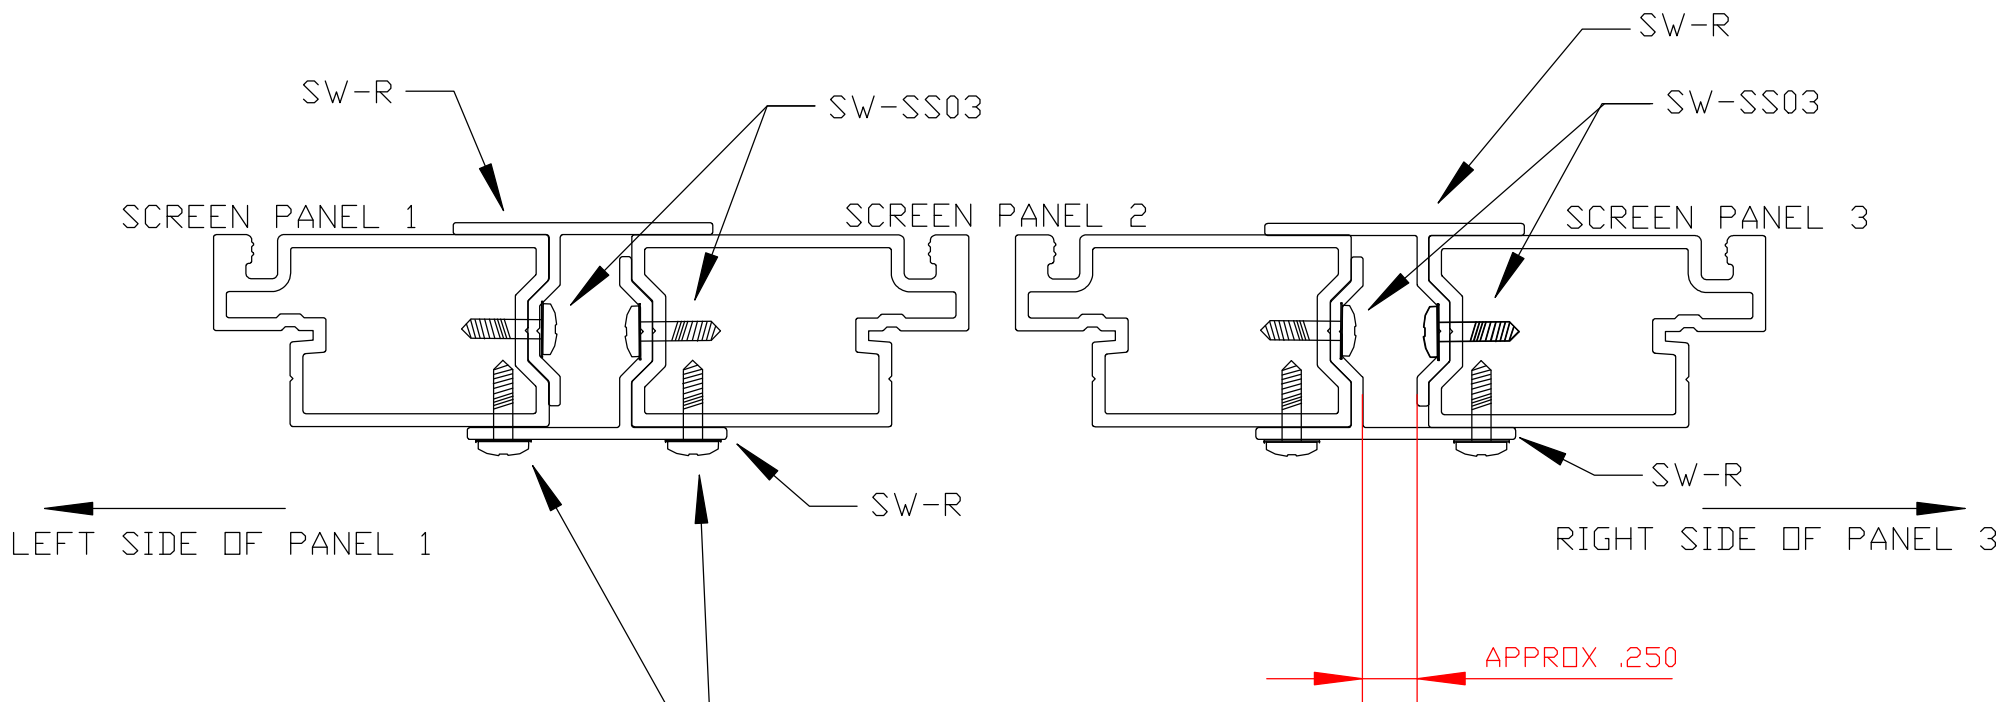
→  
RIGHT SIDE OF PANEL 3

INSTALL CENTER PANEL.  
R CHANNEL(S) WILL OVERLAP WHEN INSTALLED.

SCREEN PANEL 2

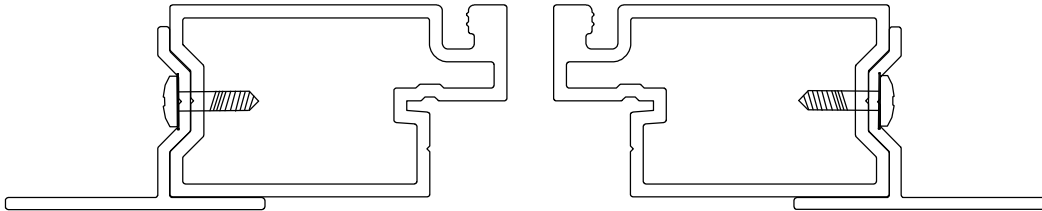


	
<b>CONNECTICUT SCREEN WORKS, INC</b> Wallingford, CT 06492 (203) 741-0859	
<b>Title:</b> 3 PANEL INSTALL (VERT R CHANNEL)	
<b>Date:</b> 08/01/06	<b>By:</b> MC
<b>Scale:</b> N/A	<b>Rev:</b> 08/01/07 by MC
<b>Page:</b> 2 OF 3	<b>Rev:</b> 10/26/08 by MC
<b>Alloy:</b> 6063	<b>Rev:</b>
<b>Temper:</b> T5	<b>Patent:</b> 7,938,163
<b>Length:</b> 16'	Others Pending
<b>Die:</b>	
<small>all contents copyright 2006, 2012 by CSW, Inc.</small>	



DISTANCE DETAILED IS TYP FOR ALL.  
 ACTUAL SIZE MAY VARY BASED UPON  
 CALCULATIONS MADE DURING PLANNING

LARGE PANELS MAY REQUIRE THE  
 INSTALLATION OF ADDITIONAL INTERIOR  
 SCREWS. INSTALL IN PAIRS AS REQUIRED.  
 USE SW-SS01 OR EQUIVALENT

	
<b>CONNECTICUT SCREEN WORKS, INC</b> Wallingford, CT 06492 (203) 741-0859	
<b>Title:</b> 3 PANEL INSTALL (VERT R CHANNEL)	
<b>Date:</b> 08/01/06	<b>By:</b> MC
<b>Scale:</b> N/A	<b>Rev:</b> 08/01/07 by MC
<b>Page:</b> 2 OF 3	<b>Rev:</b> 10/26/08 by MC
<b>Alloy:</b> 6063	<b>Rev:</b>
<b>Temper:</b> T5	<b>Patent:</b> 7,938,163
<b>Length:</b> 16'	Others Pending
<b>Die:</b>	
<small>all contents copyright 2006, 2012 by CSW, Inc.</small>	